

MISSION-CRITICAL
INTERCONNECT
SOLUTIONS



Glennair
STAR-PAN™

JTAC-TOUGH™

STAR-PAN™ Light

Powering Soldier Connectivity
and C4ISR Mission Success

QUICK-START USER'S GUIDE

NOVEMBER 2021



**STAR-PAN Light: The
Battle-Tested Bifurcated
Power and Data Cable
with 5V Regulator**

Powering-up STAR-PAN LIGHT: Battery Power



STAR-PAN Light
(808-054 with Battery Plug and
Radio Plug Cable Ends)



STAR-PAN Light
(808-058 with Battery Plug and
PAN Receptacle Cable Ends)

Main Battery
with Adapter



Connect the “BATTERY” cable on STAR-PAN Light (located on the lower right-hand side) to the battery adapter. Red indicators on cables will align.

Connecting STAR-PAN Light to the EUD/Host



USB-C EUD/Host cable
(contact factory for P/N)



EUD/Host

Plug the circular end of the USB-C cable into the “EUD/HOST” port on the left-hand side of STAR-PAN Light (Red indicators on cable and port will align). Plug the small rectangular end of the USB-C cable into the charging port of the phone.



STAR-PAN

**SCALABLE
SOLDIER
NETWORKS**



STAR-PAN™ II
(Dismounted Infantry)



STAR-PAN™ VI
(JTAC / Mission Commander)



www.glenair.com/star-pan

+1.818.247.6000

1211 Air Way, Glendale CA 91201

P/N 990-TS010