



PCB footprints for standard and high density socket connectors with right angle PC tails


PCB FOOTPRINT FOR 280-025S AND 280-029S CONNECTORS

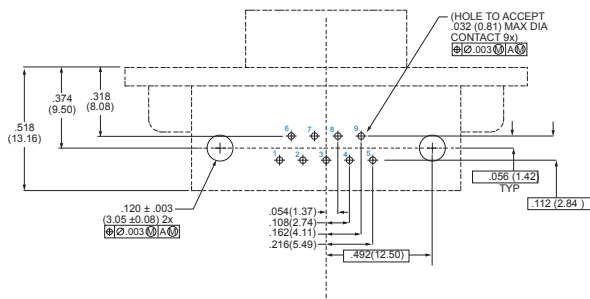


1S9
9 #20

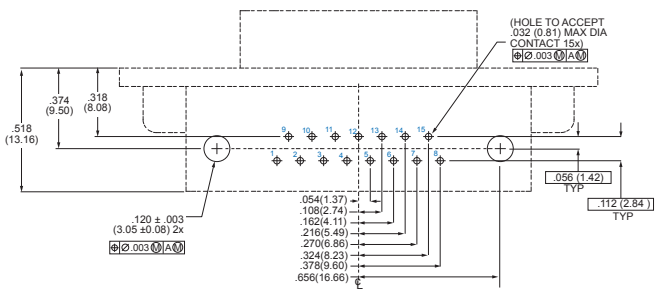

2S15
15 #20

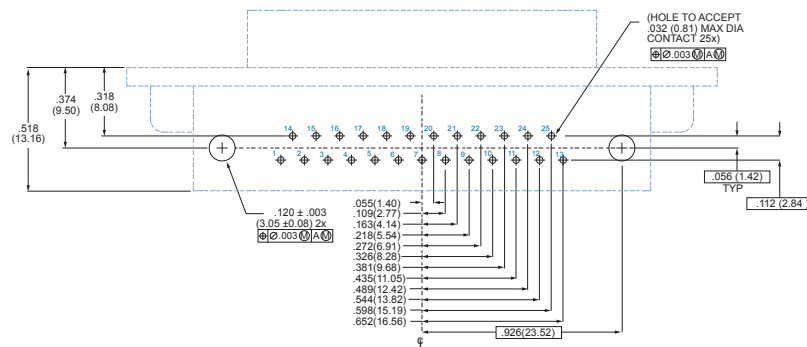


3S25
25 #20

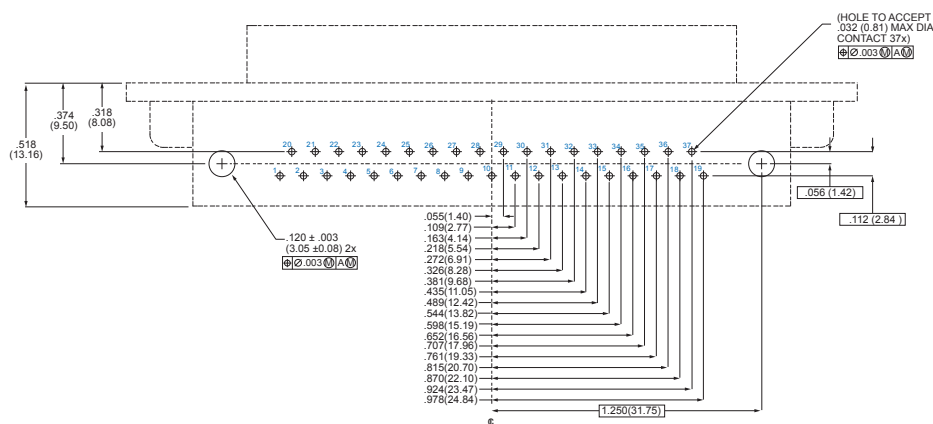


4S37
37 #20

PCB footprints for standard and high density socket connectors with right angle PC tails


PCB FOOTPRINT FOR 280-025S AND 280-029S CONNECTORS

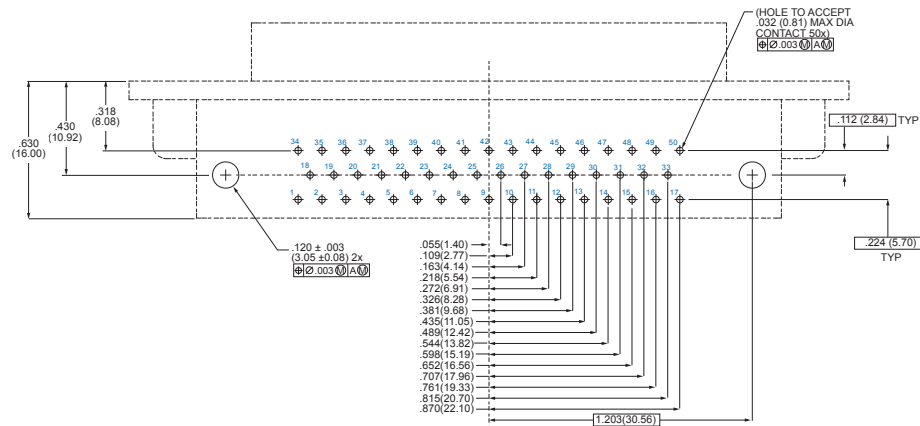


5S50
50 #20

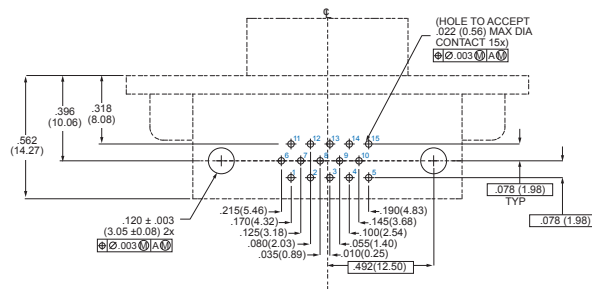

1H15
15 #22

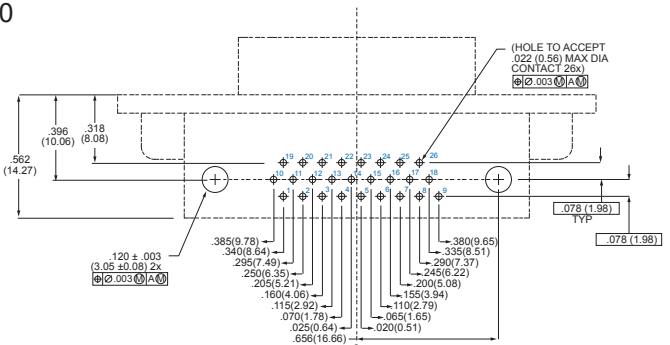

2H26
26 #22

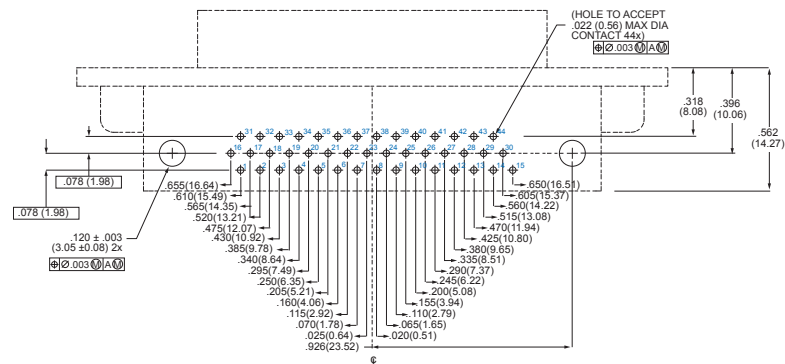


3H44
44 #22


PCB footprints for standard and high density socket connectors with right angle PC tails

PCB FOOTPRINT FOR 280-025S AND 280-029S CONNECTORS

4H62
62 #22

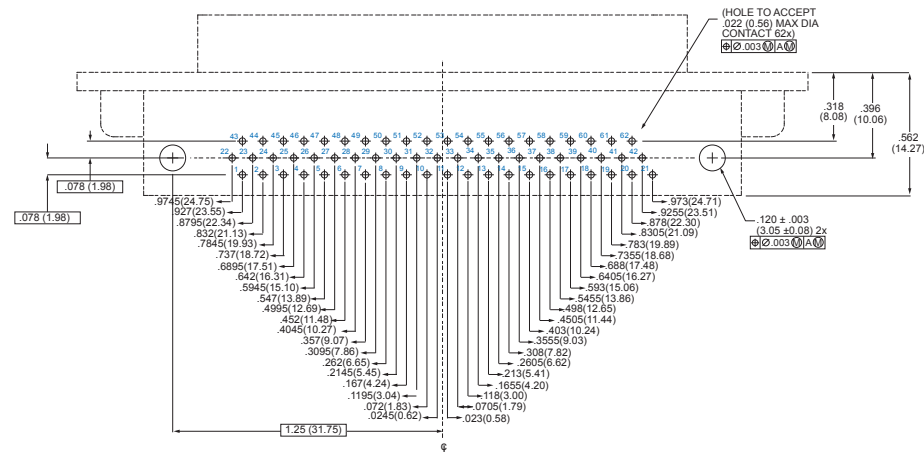

5H78
78 #22

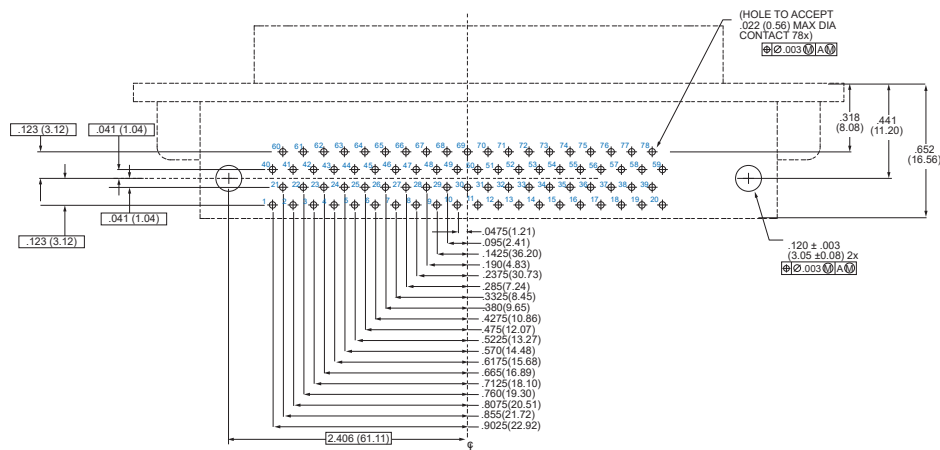

6H104
104 #22

