




### PCB FOOTPRINT FOR 280-052P AND 280-056P COMBO CONNECTORS

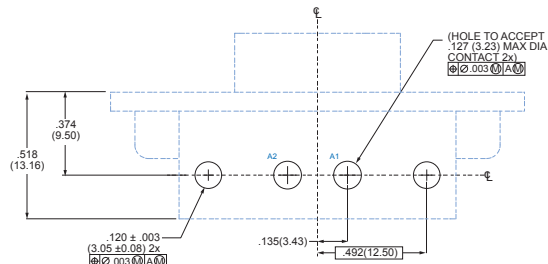


**1-2P2**  
2 #8

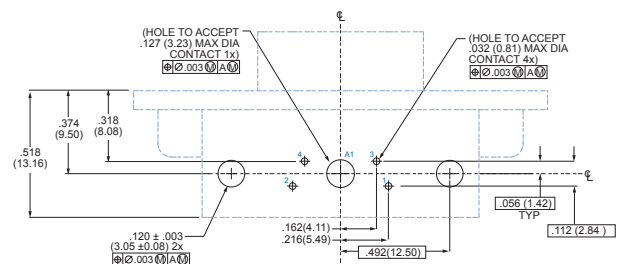


**1-5P1**  
1 #8, 4 #20

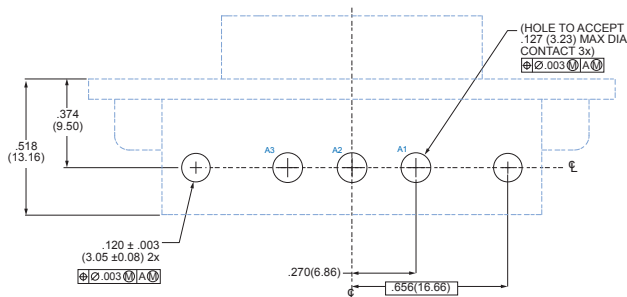


**2-3P3**  
3 #8

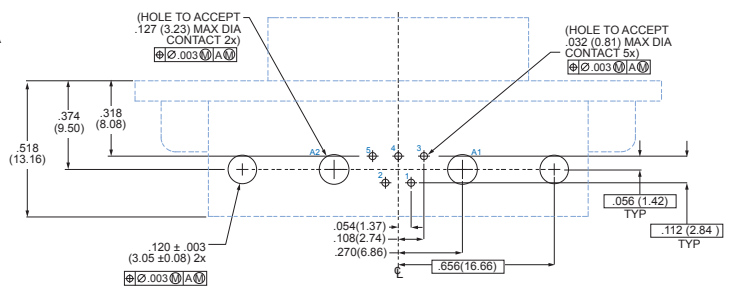

**2-7P2**  
2 #8, 5 #20

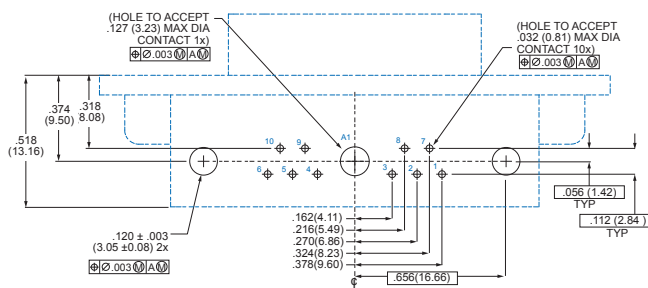


**2-11P1**  
1 #8, 10 #20

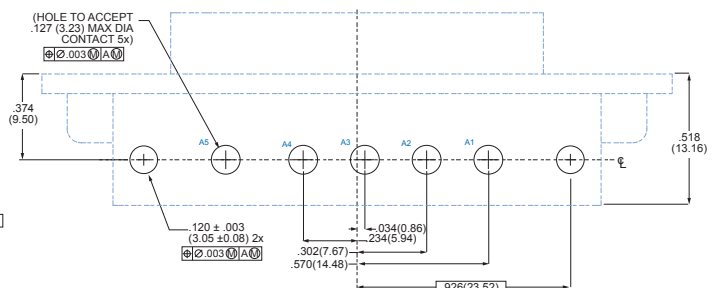


**3-5P5**  
5 #8

**3-9P4**  
4 #8, 5 #20

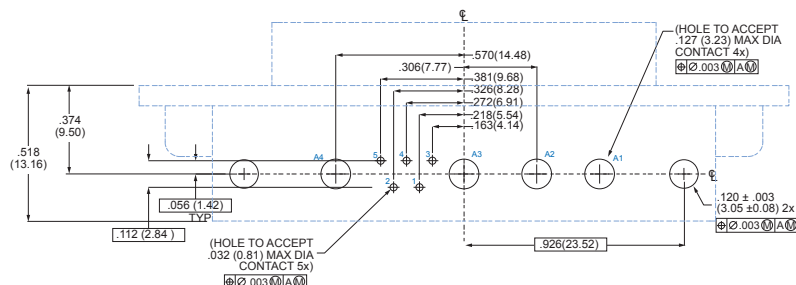


### PCB FOOTPRINT FOR 280-052P AND 280-056P COMBO CONNECTORS


**3-13P3**  
3 #8, 10 #20

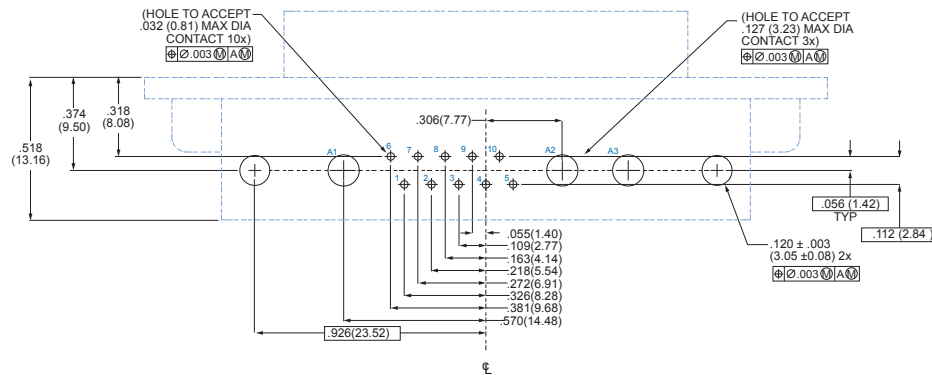


**3-17P2**  
2 #8, 15 #20

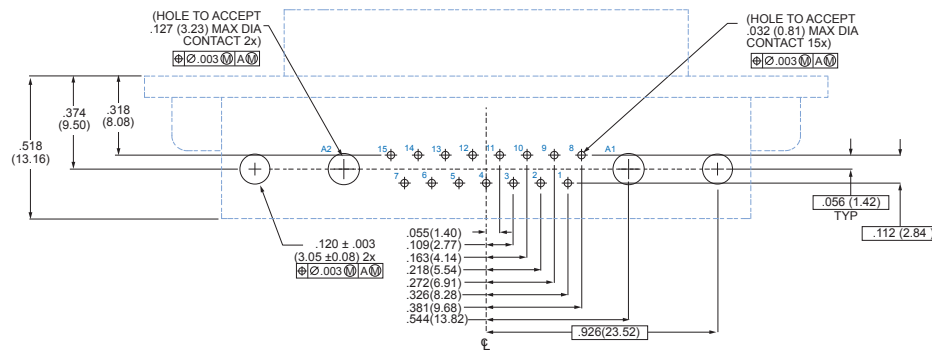

**3-21P1**  
1 #8, 20 #20

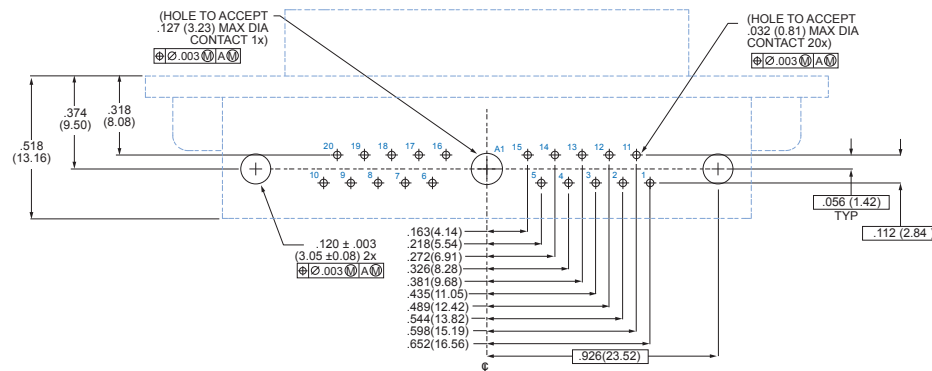


**4-8P8**  
8 #8

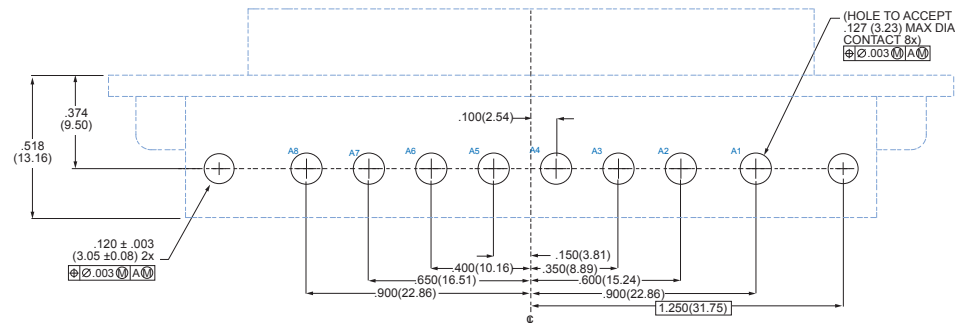


### PCB FOOTPRINT FOR 280-052P AND 280-056P COMBO CONNECTORS


**4-13P6**  
6 #8, 7 #20

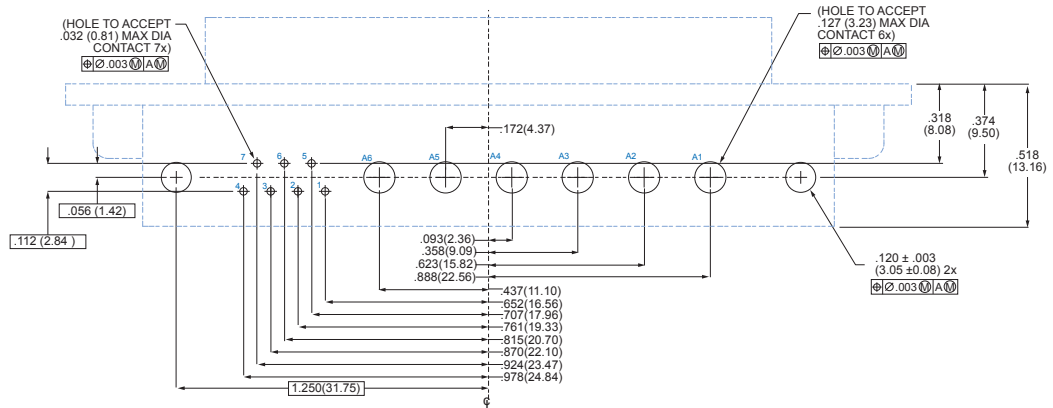

**4-17P5**  
5 #8, 12 #20

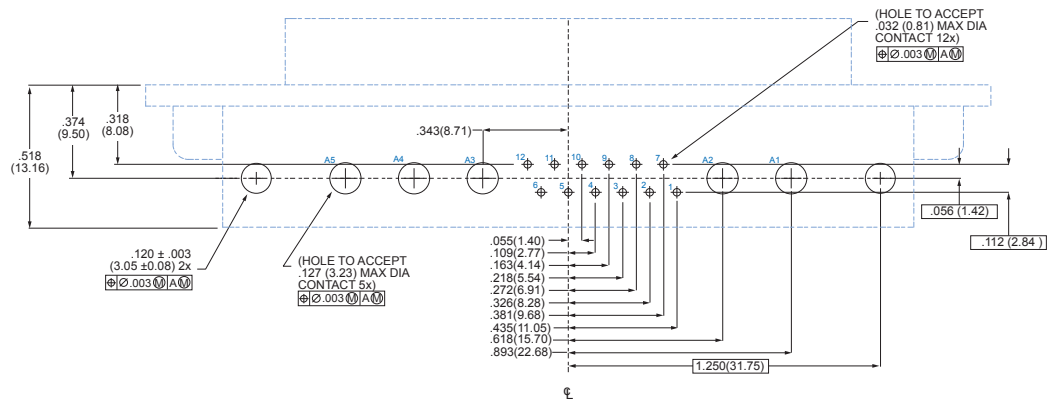


**4-21PA4**  
4 #8, 17 #20

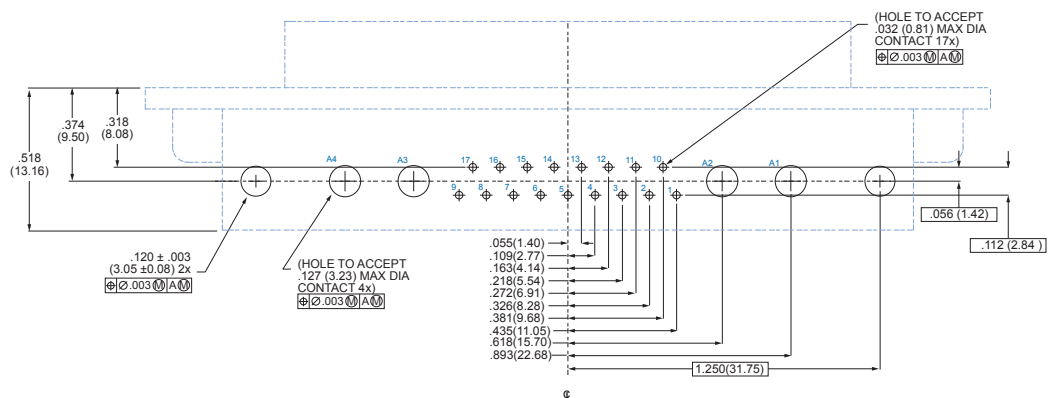


### PCB FOOTPRINT FOR 280-052P AND 280-056P COMBO CONNECTORS


#### 4-25P3 3 #8, 22 #20

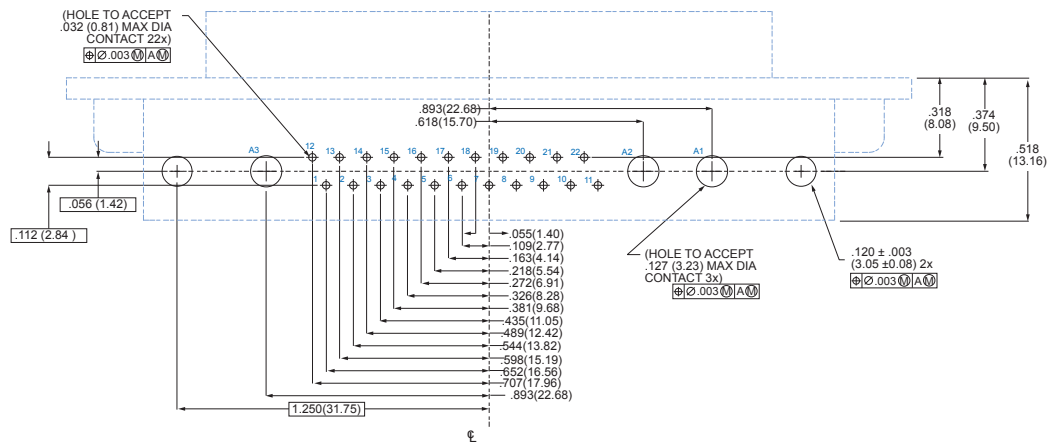

#### 4-27P2 2 #8, 25 #20

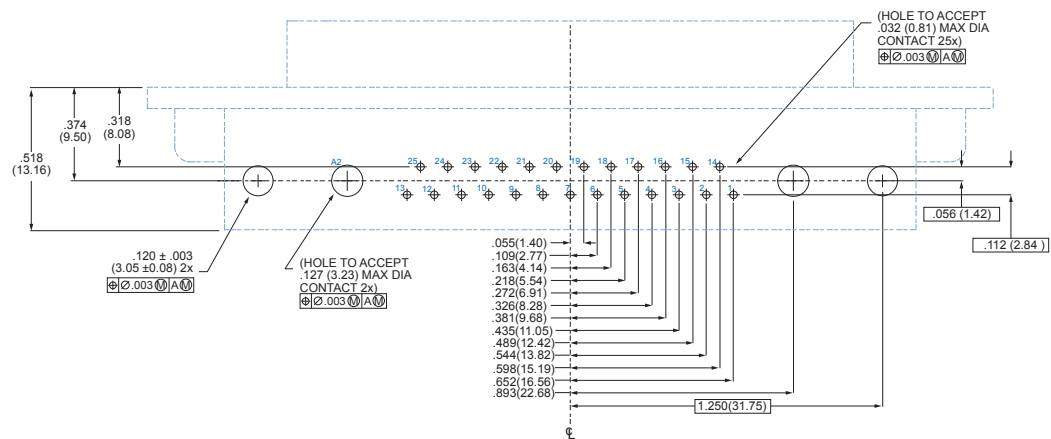

#### 5-24P7 7 #8, 17 #20

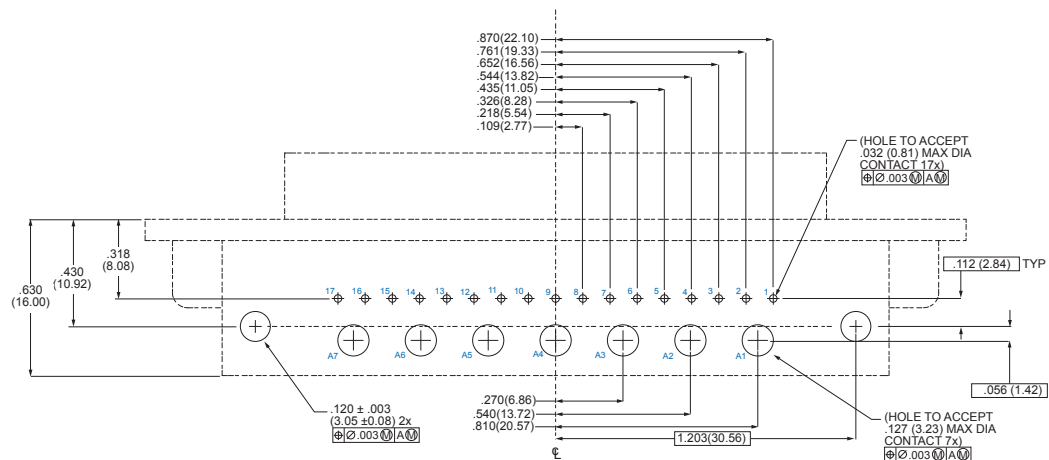

SERIES 28


# HiPer-D® Panel Cutouts and PCB Footprints




PCB footprints for combo pin connectors with right angle PC tails

## PCB FOOTPRINT FOR 280-052P AND 280-056P COMBO CONNECTORS

**5-36P4**  
4 #8, 32 #20

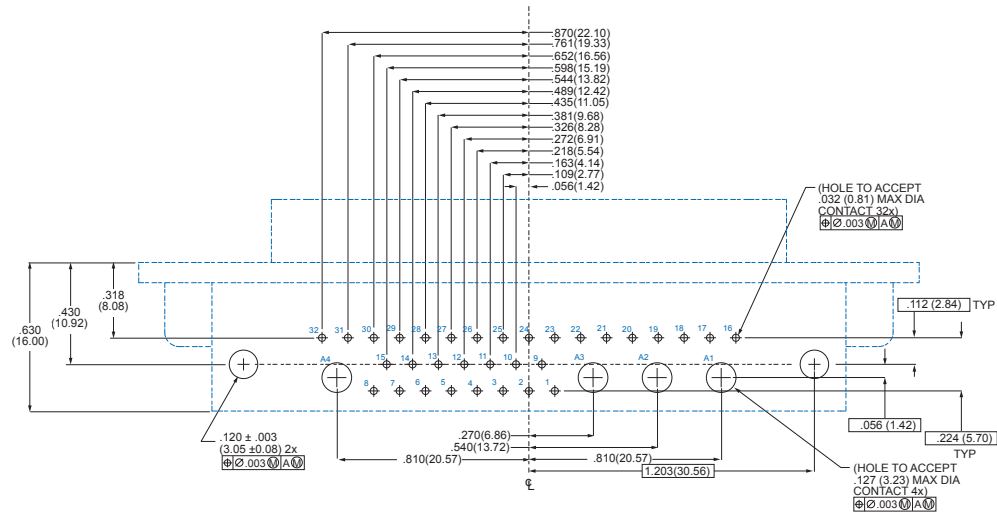

**5-43P2**  
2 #8, 41 #20

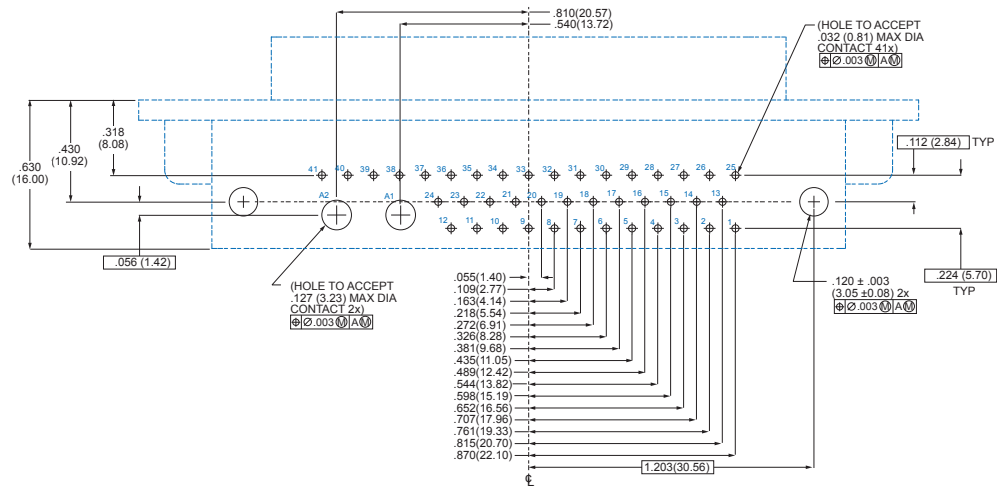

**5-47P1**  
1 #8, 46 #20

