



SERIES 80


Mighty Mouse Contacts and Tools



Recommended Shielded Twisted Pair Termination to Size #23 Contacts


STEP 1

Strip jacket back .400" Max. If pair is unjacketed, install shrink tubing .400" Max from end of wires.

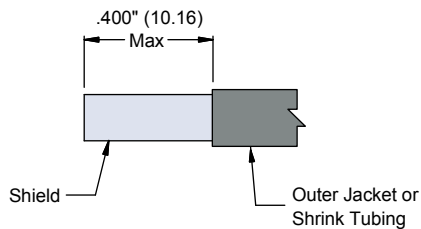


STEP 2

Trim shield back to jacket. Ensure that wires do not become separated underneath jacket.

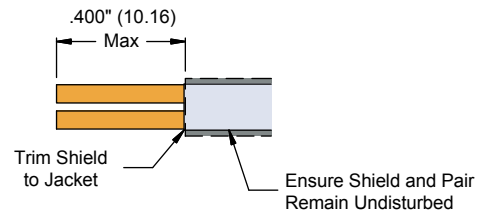


STEP 3

Install #23 crimp contacts included with connector per recommended installation procedure.

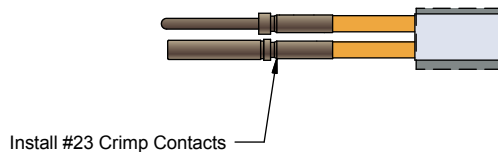


STEP 4

Insert contacts into adjacent cavities of high-speed mighty mouse connector with rear grommet removed (MOD-422B).

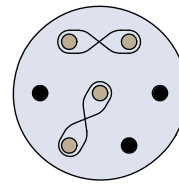

Install Pair Into Adjacent Cavities

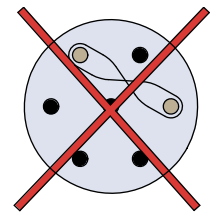

Avoid Installing Pair Into Non-adjacent Cavities

STEP 5

Assembled view

