

SERIES 80 MIGHTY MOUSE Installation Instructions



AI85087 SpeedMaster™ Installation Instructions for Mighty Mouse 824

INSTALLATION

- A. Slide completed SpeedMaster into the contact cavity, making sure to align the SpeedMaster's polarization keys with the contact cavity keyway. (Figure 1)
- B. Slide the retention ferrule far enough back on the cable that you're able to bottom out the SpeedMaster assembly without the threads engaging. (Figure 2)
- C. Slide the retention ferrule forward. Then, using a 9mm wrench, or 3/8" wrench if using ferrule tool 607-011, tighten the retention ferrule to a torque of 8-10 in-lb. (Figure 3)

Notes:

Figures 1-3 show installation into a 824-010-01 shell. Installation in all other Mighty Mouse SpeedMaster connectors is identical. See 824-009/010 for other shells types.

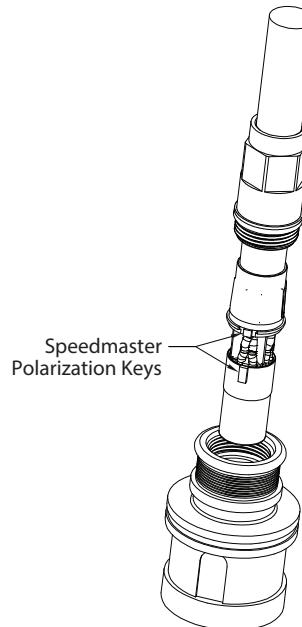


FIGURE 1

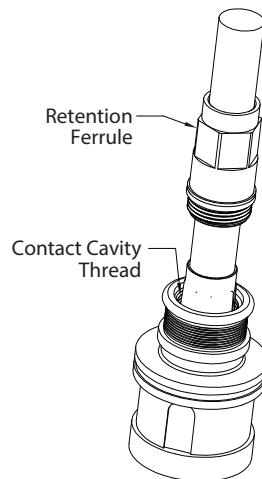


FIGURE 2

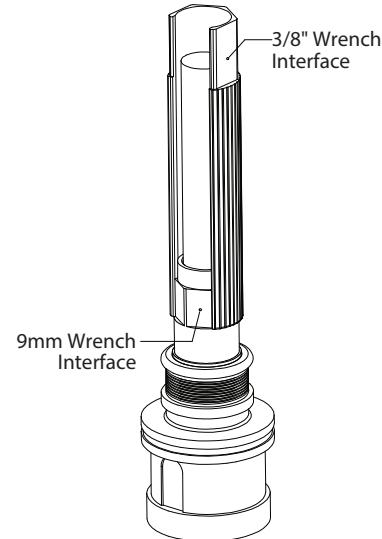


FIGURE 3