

ULTRAMINIATURE CIRCULAR

Series 806

Mil-Aero Connectors

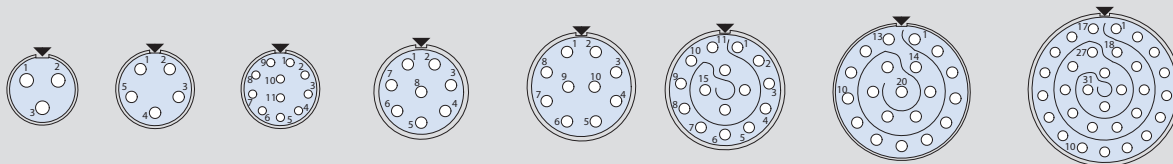


Contact Arrangements (Mating face of pin connector Shown. Socket numbering is reversed.)

Series 806 Arrangements with #20HD Contacts (1800 Vac, 7.5 A)

Mating face of
pin connector.
Socket
numbering is
reversed.

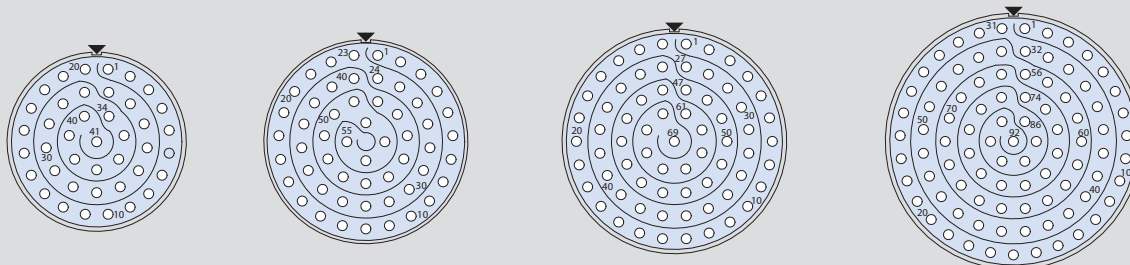
Symbol ▼
indicates
master key
location.



Arrangement No.	8-3	9-5	9-11	10-8	11-10	12-15	14-20	16-31
No. of Contacts	3	5	11	8	10	15	20	31

Mating face of
pin connector.
Socket
numbering is
reversed.

Symbol ▼
indicates
master key
location.

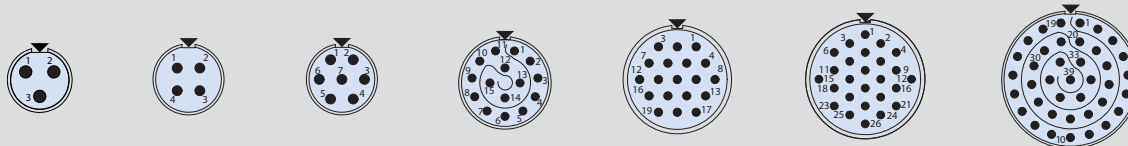


Arrangement No.	18-41	20-55	22-69	24-92
No. of Contacts	41	55	69	92

Series 806 Arrangements with #22HD Contacts (1300 Vac, 5 A)

Mating face of
pin connector.
Socket
numbering is
reversed.

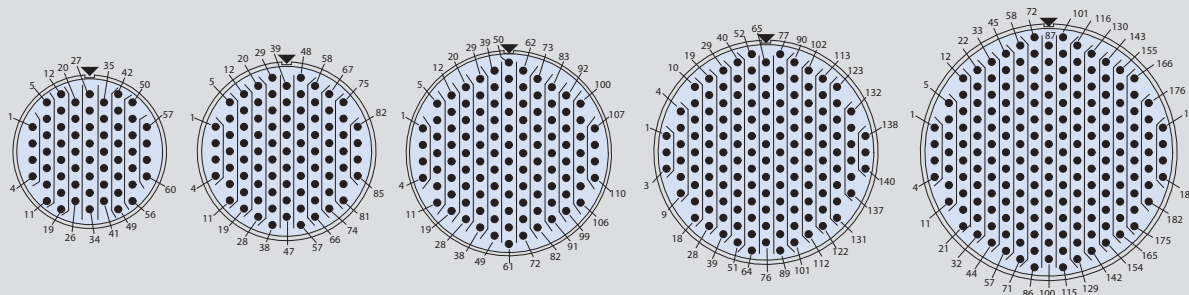
Symbol ▼
indicates
master key
location.



Arrangement No.	7-3	8-4	8-7	10-15	11-19	12-26	14-39
No. of Contacts	3	4	7	15	19	26	39

Mating face of
pin connector.
Socket
numbering is
reversed.

Symbol ▼
indicates
master key
location.



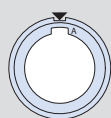
Arrangement No.	16-60	18-85	20-110	22-140	24-186
No. of Contacts	60	85	110	140	186

CONNECTOR REFERENCE

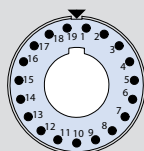
Series 806 size 8 and size 8 and 22HD Combo Contact Arrangements

Mating face of pin connector. Socket numbering is reversed.

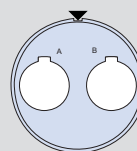
Symbol ▼ indicates master key location.

**10-1**

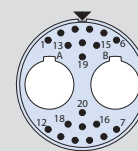
1 - #8

**14-20A**

19 - #22HD, 1 - #8

**16-2**

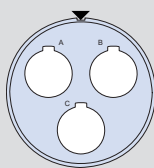
2 - #8

**16-22**

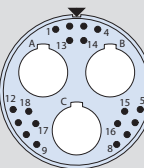
2x - #8, 20x - #22HD

Mating face of pin connector. Socket numbering is reversed.

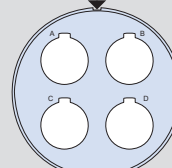
Symbol ▼ indicates master key location.

**18-3**

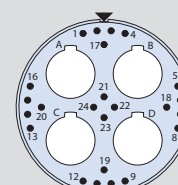
3x #8

**18-21**

3x - #8, 18x - #22HD

**20-4**

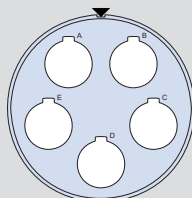
4x #8

**20-28**

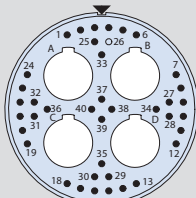
4x - #8, 24x #22HD

Mating face of pin connector. Socket numbering is reversed.

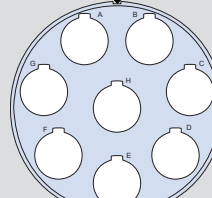
Symbol ▼ indicates master key location.

**22-5**

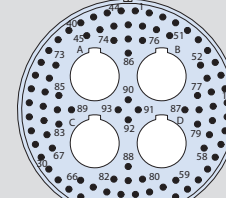
5x #8

**22-44**

4x - #8, 40x - #22HD

**24-8**

8x #8

**24-97**

4x - #8, 93x - #22HD